




### ORDER DETAILS

CODE: 85007. 200040 Colours: 902 Black Sand Size: S,M

### TOOLS REQUIRED:

2mm Allen Key

### STEP 1:

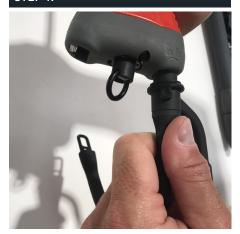

Remove the Modular Harness Loop from the Connect Quick Release.

## STEP 2:



Remove the retainer on top of the Security Finger by undoing the set screw using a 2mm Allen key.

### STEP 3:



Slide the old Security Finger off the Modular Harness Loop.

### STEP 4:




Slide the new Security Finger onto the Modular Harness Loop. Ensure security finger is orientated correctly as shown.

## STEP 5:



Transfer Lockguard Ring from old Security Finger to new Security Finger.

## STEP 6:

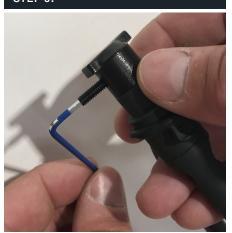

Reinstall the retainer onto the top of the Modular Harness Loop, insert set screw and tighten with 2mm Allen Key until both ends of the set screw are flush with the sides of the retainer.



# STEP 7:

Reattach Modular Harness Loop to Connect Quick Release and engage the LockGuard.

# STEP 8:

Test the Quick Release is functioning correctly.